


Testing and Inspection


ON-VEHICLE INSPECTION

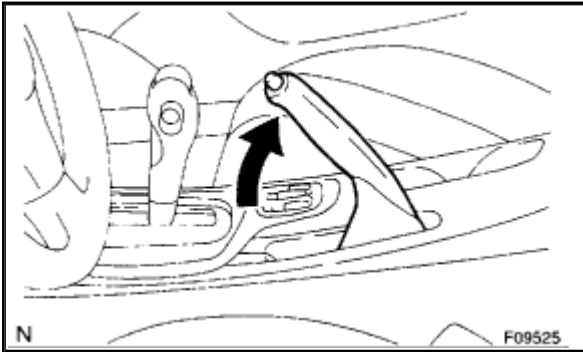

ZOOM

SIZED FOR PRINT

1. CHECK PARKING BRAKE LEVER TRAVEL Pull the parking brake lever all the way up, and count the number of clicks. Parking brake lever travel at **196 N (20 kgf, 44.1 lbs)** : **5 - 8 clicks** If incorrect, adjust the [parking brake](#).

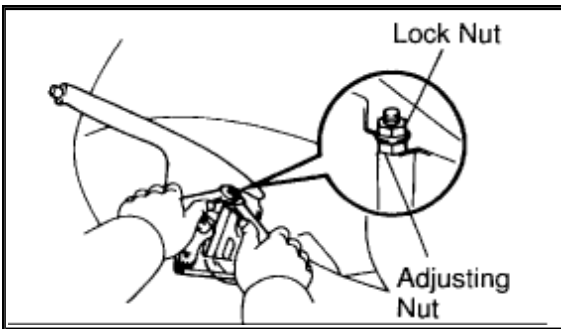

ZOOM

SIZED FOR PRINT

2. IF NECESSARY, ADJUST [PARKING BRAKE](#) **HINT:** Before adjusting the [parking brake](#), make sure that the rear [brake shoe](#) clearance has been adjusted.
 - a. Remove the console box.
 - b. Loosen the lock nut and turn the adjusting nut until the lever travel is correct.
 - c. Tighten the lock nut. Torque: **5.4 Nm (55 kgf-cm, 48 inch lbs.)**
 - d. Install the console box.