


Testing and Inspection


POSITIVE CRANKCASE VENTILATION (PCV) SYSTEM INSPECTION

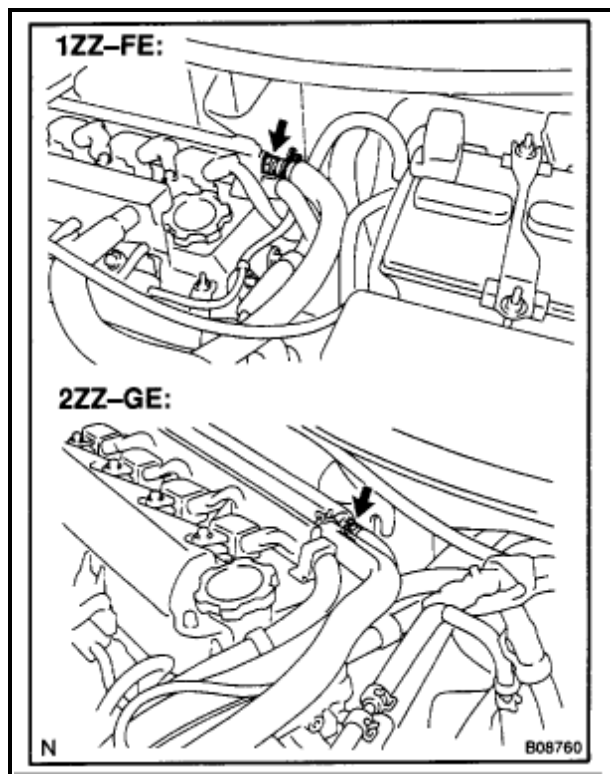

ZOOM

SIZED FOR PRINT


1. REMOVE PCV VALVE
 - a. Disconnect the **PCV** hose from the PCV valve.
 - b. Remove the PCV valve.
2. INSTALL CLEAN HOSE TO PCV VALVE
3. INSPECT PCV VALVE OPERATION

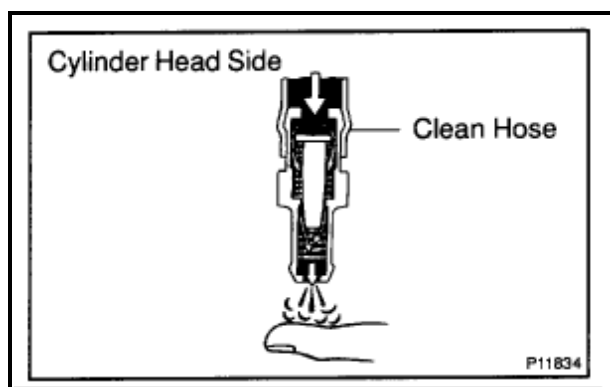

ZOOM

SIZED FOR PRINT

- a. Blow air into the cylinder head side, and check that air passes through easily. **CAUTION:** Do not suck air through the valve. Petroleum substances inside the valve are harmful.

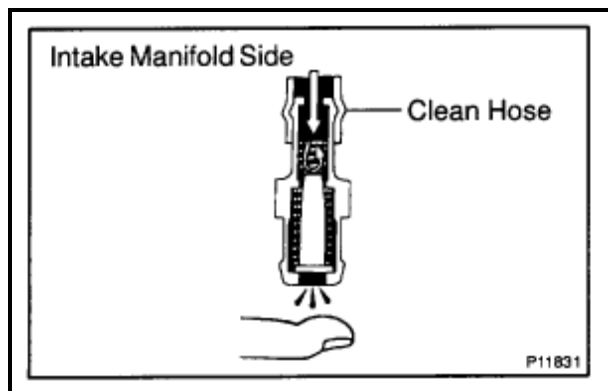


ZOOM

SIZED FOR PRINT

- b. Blow air into the intake manifold side, and check that air passes through with difficulty. If operation is not as specified, replace the PCV valve.

4. REMOVE CLEAN HOSE FROM PCV VALVE

5. REINSTALL PCV VALVE

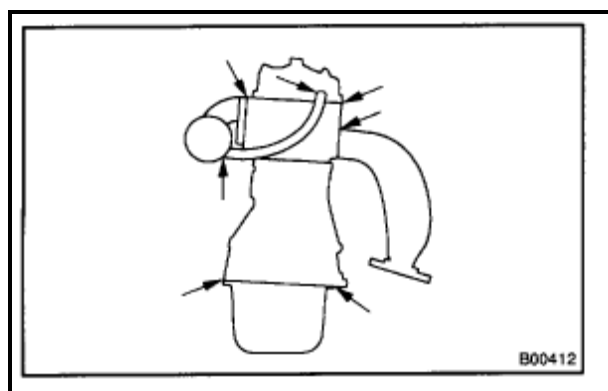

ZOOM

SIZED FOR PRINT

6. VISUALLY INSPECT HOSES, CONNECTIONS AND GASKETS

Check for cracks, leaks or damage.