

Page 1 of 3

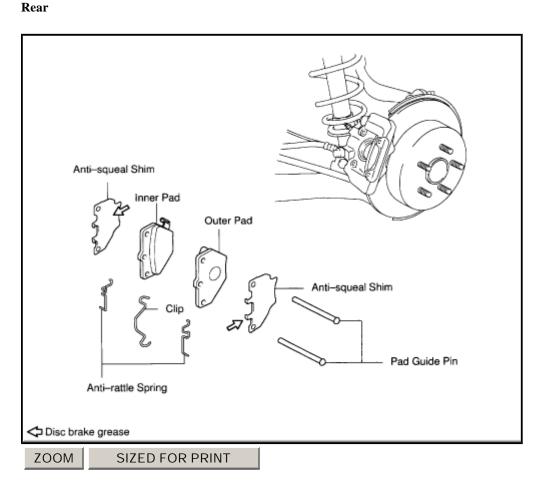

REPLACEMENT


1. REMOVE REAR WHEEL

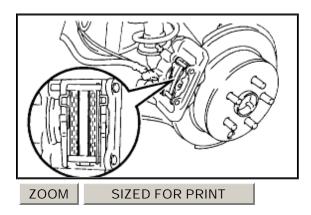

2. INSPECT PAD LINING THICKNESS Check the pad thickness. Minimum thickness: 1.0 mm (0.039 inch)



Page 2 of 3

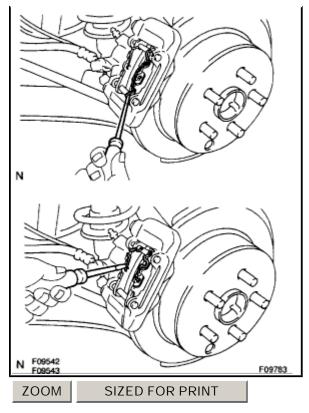

3. REMOVE CLIP, 2 ANTI-RATTLE SPRINGS AND 2 PAD GUIDE PINS


- a. Using a screwdriver, remove the clip and 2 anti-rattle springs. NOTICE:
- Do not deform the clip and anti-rattle spring.
- The clip and anti-rattle spring can be used again provided that they have sufficient rebound, no deformation, cracks or wear, and have had all rust, dirt and foreign particles cleaned off.
- b. Remove the 2 pad guide pins.

4. REMOVE PADS AND ANTI-SQUEAL SHIMS

- a. Remove the 2 pads.
- b. Remove the anti-squeal shim from each pad.

5. CHECK DISC THICKNESS AND RUNOUT


- 6. INSTALL NEW PADS NOTICE: When replacing worn pads, the anti-squeal shims must be replaced together with the pads.
 - a. Apply disc brake grease to inside of anti-squeal shims.
 - b. Install the anti-squeal shim on each pad.
 - c. Draw out a small amount of brake fluid from the reservoir.

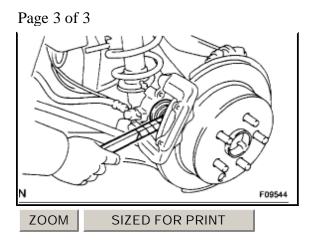

- d. Press in the piston with a hammer handle or equivalent. **HINT:** Tape the hammer handle before use. If the piston is difficult to push in, loosen the bleeder plug and push in the piston while letting some <u>brake fluid</u> escape.
- e. Install the inner pad with the pad wear indicator plats facing upward, and install the outer pad. **NOTICE:** There should be no oil or grease adhering to the friction surfaces of the pads and the disc.

7. INSTALL 2 PAD GUIDE PINS, 2 ANTI-RATTLE SPRINGS AND CLIP

a. Install the 2 anti-rattle springs on the each pad.

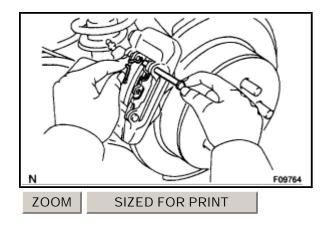

- b. While pressing the anti-rattle spring, and install the pad guide pin.
- c. Install the clip to the pad guide pin.
- 8. INSTALL REAR WHEEL Torque: 103 Nm (1,050 kgf-cm, 76 ft. lbs.)
- 9. DEPRESS BRAKE PEDAL SEVERAL TIMES
- 10. CHECK THAT FLUID LEVEL IS AT MAX LINE